

## Nastavitve in uporaba HP4195A

### Meritev impedance

**CONFIG** -> IMPEDANCE

**FORMAT** ->  $|Z|-\theta$  ali R-X

**SCALE REF** -> SCALE (forA) -> A SCALE (log) -> A AUTO SCALE -> SCALE (forB) -> B SCALE (lin)  
-> B AUTO SCALE

### Kalibracija

**CAL** -> CAL menu -> OPEN -> **ENTER** (odprte sponke)

SHORT -> **ENTER** (kratkostičnik)

LOAD -> **ENTER** (prilagojeno breme)

**CAL** -> CORRECTION (on)

**TRIG/RESET** -> CONT mode